Signet 2724-2726 pH/ORP Electrodes



Compatible with ALL Signet pH/ORP Instruments





Flat Glass

Protected Bulb

The Signet 2724-2726 pH and ORP Electrodes features a patented reference electrode design and uses the unique foul-proof patented DryLoc® connector. The large area PE reference junction and pathway is constructed to increase the total reference effectiveness and ensures long service life.

The DryLoc® connector with corrosion resistant gold plated contacts readily connects the sensor to the mating 2760 preamplifier or the 2750 sensor electronics. The robust Ryton® threaded sensor body and choice of flat pH, bulb pH, or flat ORP sensing elements provides broad range of chemical compatibility for a wide variety of applications. There are two optional pH sensing versions available, HF and LC. The HF version is for applications where traces of hydrofluoric acid (2% or less) will attack standard pH glass in levels of pH 6 and below. The LC version can be used for low conductivity fluids 20 - 100 μ S/cm nominal and below 20 μ S when mounted under controlled conditions.

The quick temperature response is available in either a PT1000 or 3 K Ω temperature sensor and allows compatibility with all Signet pH/ORP instruments. The 2724-2726 electrodes are general-purpose sensors ideal for a wide range of applications. The sensors incorporate 3 4 inch NPT or ISO 7/1-R 3/4 threads for installing into standard pipe-tees. They can also be mounted directly into Signet standard fittings, DN15 to DN100 (1 2 to 4 inch)

Features

- Patented reference design for exceptional performance *
- Mounts in Signet standard fittings from DN15 to DN100 (½ to 4 in.)
- 3/4" NPT or ISO 7/1-R 3/4 threaded sensors for use with reducing tees DN15 to DN100 (1/2 to 4 in.)
- Special design allows for installation at any angle, even inverted or horizontal
- Ryton® (PPS) body for broad range of chemical compatibility
- Patented DryLoc® connector with gold plated contacts
- Quick temperature response
- Bulb HF Resistant glass available for trace HF, less than 2% concentration, applications
- Low conductivity sensor available for liquids down to 20 $\mu S/cm$
- New! Flat HF resistant glass available for trace HF, less than 2% concentration applications.
 Especially in applications with abrasive particles or that require extensive probe cleaning

Applications

- Water & Wastewater Treatment
- Neutralization Systems
- Effluent Monitoring
- Sanitization Systems
- Pool & Spa Control
- Aquatic Animal Life Support Systems
- Process Control
- Cooling Towers


*U.S. Patent Nos.: 6,666,701, 7,799,193 B2, 7,867,371 B2 and 8,211,282 B2


Specifications

General				
Performance	Efficiency	>97% @ 25 °C (77 ° F)		
Operating Range	pH	0 to 14 pH		
	ORP	±2000 mV		
	3-2726-LC	Low conductivity fluids; 20 - 1 be less than 150 ml/min in a p	00 μS/cm nominal < 20 μS; flow must properly grounded system	
	3-2724-HF, 3-2726-HF	Hydrofluoric acid resistant gla	ass, pH 6 or below; trace HF ≤2%	
Compatibility				
	2750 Electronic (for 890	0, 9900, 4 to 20 mA), 2760 Prea	mplifier (8750)	
Temperature Sensor				
	PT1000 versions	Compatible with Signet 2750 pH/ORP Sensor electronics for connection to a PLC or to the Signet 8900 or 9900 instruments		
	3 KΩ Balco versions	Compatible with the Signet 2760 pH/ORP preamplifier for connection to the Signet 8750 pH/ORP Transmitter and 2750 with 8900 or 9900 instruments		
Process Connection				
	¾ in. NPT	ISO 7/1-R ¾	Mounts into Signet fittings	
Wetted Materials				
	рН	Ryton® (PPS), glass, UHMW PE, FPM		
	ORP	Ryton® (PPS), glass, UHMW P	E, FPM, Platinum	
Max. Temperature/Pres	ssure Rating			
Operating Temperature Range*		-10 °C to 85 °C	14 °F to 185 °F	
Operating Pressure Range		0 to 6.9 bar (0 to 100 psi) @ -10 °C to 65 °C (14 °F to 149 °F)		
		Linearity Derated 6.9 to 4.0 bar (100 to 58 psi) @ 65 °C to 85 °C (149 °F to 185 °F)		
*Best performance for 2	2724-HF and 2726-HF se	nsors is above 10 °C (50 °F)		
Recommended Storage	e Temperature			
		0 °C to 50 °C	32 °F to 122 °F	
The electrode glass will	l shatter if shipped or sto	red at temperature below 0 °C	(32 °F)	
The performance life of	the electrode will shorte	n if stored at temperatures abo	ove 50 °C (122 °F)	
Mounting				
In-line Mounting	Use the sensor threads			
	Use a Signet standard fitting ½ to 4 in.			
	Sensor can be mounted	at any angle		
Submersible Mounting	Use threads on models	2750 or 2760		
	Requires ¾ inch NPT or	ISO 7/1-R 3/4 male threaded l	iquid tight extension conduit.	
Shipping Weight				
	0.25 kg	0.55 lb		
Standards and Approva	ıls			
	RoHS Compliant, China RoHS			
) 9001 for Quality, ISO 14001 fo ational Health and Safety	r Environmental Management and	

See Temperature and Pressure graphs for more information

Dimensions

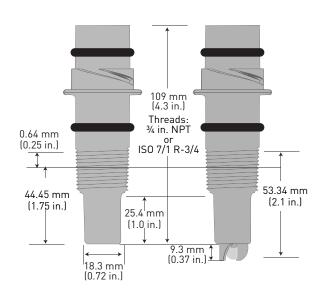

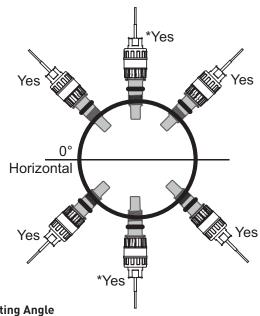

Mounting Angle

Models 2724-2726 may be mounted at any angle without affecting the performance.


*Avoid locations with air pockets and sediment.



^{*}Refer to the Signet Submersion brochure located in the K-Factors Fittings and More Kit (3-0000-709) for installation suggestions and options.


Electrode Key Features and Benefits:

- Ryton® body for chemical compatibility with most harsh chemicals.
- 2. Porous UHMW PE (ultra high molecular weight polyethylene) junction resists fouling and build-up.
- 3. Internal temperature sensor located in the glass stem for a quick temperature response.
- 4. DryLoc® connector with corrosion resistant gold pins for quick and easy sensor removal.
 - Resists moisture and dirt intrusion.
- 5. Dual-patented reference design with a 406 mm (16 inch) reference pathway enhances longer life. This enables the sensor to last significantly longer than other standard pH/ORP electrodes in most applications.
- 5a. With the new patented reference design, the Signet 2726-LC version performs better in low conductivity water between 20 100 μS and lasts longer than previous "DI" electrodes.
- 5b. The 2726-LC sensor also performs in applications with extremely low (less than 20 μS) conductivity. Special precautions must be taken to avoid measurement complications. Please note the following.
 - Electrostatic charges (streaming potentials) can cause dramatic offsets in a system with very low conductivity water. To minimize this, sensors should be placed in a well grounded system.
 - To enhance performance, a low flow cell is recommended to provide a steady flow rate (150 ml/minute). Sensors placed in high flow applications will experience noisier readings due to streaming potential.
- 6. Threads for NPT or ISO process connection into reducing tees
 - Use off-the-shelf GF reducing tees DN20 to DN100 (% in. to 4 in.).
- 7. Mounts directly into Signet fittings (½ in. 4 in.) for easy sensor retrofitting.
- Mount submersed into a tank via the 2750 or 2760 back threads.

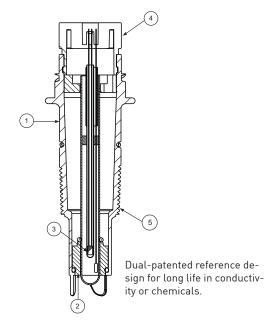



(6) Sensor in threaded reducing tee

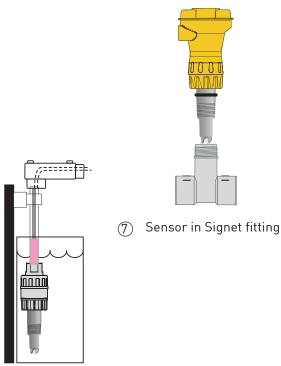


8 Sensor submersible installation

Operating Temperature/Pressure Graph

Note:

The pressure/temperature graphs are specifically for the Signet sensor. During system design the specifications of all components must be considered. In the case of a metal piping system, a plastic sensor will reduce the system specification.

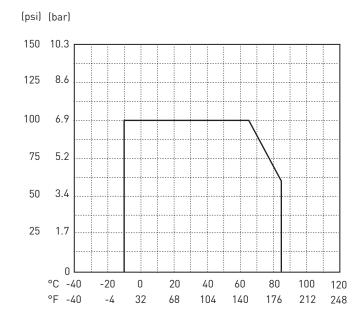

Application Tips

- Use the flat glass electrodes when a self-cleaning feature is desired; especially useful in applications with abrasive chemicals.
- Use bulb protected electrodes for general purpose applications
- ORP electrodes are generally used for chemical reaction monitoring, not control.
- Ensure that sensor materials are chemically compatible with the process liquid.
- Keep electrode tip wet, avoid air pockets and sediment.

Model 2724-2726 Ordering Notes

- 1) pH and ORP electrodes require connection to model 2750 sensor electronics or 2760 preamplifier.
- 2) The 2750 "EasyCal" feature recognizes common pH and ORP buffer values of 4, 7 and 10 pH and +87 and +264 mV for ORP.

Buffer Solutions

3822-7004 3822-7007 3822-7010 Quinhydrone

3822-7115






The Signet pH buffers are ideal for calibration. The liquid solutions are conveniently packaged in one pint (473 ml) bottles. pH buffer kits in powder pillows are available for mixing fresh solutions with water at the time of use.

All pH buffers are color coded for easy identification; 4.01 pH is red, 7.00 pH is yellow, and 10.00 pH is blue. All pH buffers are traceable to NIST standards. These buffer solutions can be used to calibrate ORP sensors when saturated with quinhydrone.

Ordering Information



Mfr. Part No.	Code	Tip design	Process Connection Thread Options			
pH Electrodes						
Temperature element PT1000; use with 2750 sensor electronics*						
3-2724-00	159 001 545	Flat	¾ in. NPT, Thread			
3-2724-01	159 001 546	Flat	ISO 7/1-R 3/4 Thread			
3-2726-00	159 001 553	Bulb	34 in. NPT, Thread			
3-2726-01	159 001 554	Bulb	ISO 7/1-R 3/4 Thread			
3-2726-HF-00	159 001 549	Bulb, HF resistant ¹	34 in. NPT, Thread			
3-2726-HF-01	159 001 550	Bulb, HF resistant ¹	ISO 7/1-R 3/4 Thread			
3-2726-LC-00	159 001 557	Bulb, Low Conductivity ²	34 in. NPT, Thread			
3-2726-LC-01	159 001 558	Bulb, Low Conductivity ²	ISO 7/1-R 3/4 Thread			
Temperature element 3 KΩ Balco; use with 2760 preamplifier** or 2750 sensor electronics*						
3-2724-10	159 001 547	Flat	3/4 in. NPT, Thread			
3-2724-11	159 001 548	Flat	ISO 7/1-R 3/4 Thread			
3-2724-HF-10	159 001 771	Flat, HF resistant ¹	3/4 in. NPT, Thread			
3-2724-HF-11	159 001 772	Flat, pH resistant ¹	7/1-R 3/4 Thread			
3-2726-10	159 001 555	Bulb	¾ in. NPT, Thread			
3-2726-11	159 001 556	Bulb	ISO 7/1-R 3/4 Thread			
3-2726-HF-10	159 001 551	Bulb, HF resistant ¹	¾ in. NPT, Thread			
3-2726-HF-11	159 001 552	Bulb, HF resistant ¹	ISO 7/1-R 3/4 Thread			
3-2726-LC-10	159 001 559	Bulb, Low Conductivity ²	¾ in. NPT, Thread			
3-2726-LC-11	159 001 560	Bulb, Low Conductivity ²	ISO 7/1-R 3/4 Thread			
ORP Electrodes; Compatible with both the 2750 sensor electronics* and the 2760 preamplifier**						
3-2725-60	159 001 561	Flat	3¼ in. MNPT, Thread			
3-2725-61	159 001 562	Flat	ISO 7/1-R 3/4 Thread			

^{*}The 2750 sensor electronics has a digital (S^3L) output which is used with 8900 or 9900 instruments. It also has a 4 to 20 mA output for connections to PLC's, data recorders, etc.

¹HF resistant <2% HF

²Low conductivity applications, 20 - 100 μS/cm recommended



Note:

The 3K Balco temperature element electrodes are also compatible with the 2750 sensor electronics, 8900 and 9900 instruments.

Accessories and Replacement Parts

Mfr. Part No.	Code	Description
1220-0021	198 801 000	0-ring, FPM
3-2700.395	159 001 605	Calibration kit: includes 3 polypropylene cups, box used as cup stand, 1 pint (473 ml) pH 4.01, 1 pint (473 ml) pH 7.00
3822-7115	159 001 606	20 gm bottle quinhydrone for ORP calibration (must use pH 4.01 and/or pH 7.00 buffer solutions)
3-2759	159 000 762	pH/ORP System Tester (adapter cable sold separately)
3-2759.391	159 000 764	2759 DryLoc® Adapter Cable (for use with 2750 and 2760)
3-0700.390	198 864 403	pH Buffer Kit (1 each 4, 7, 10 pH buffer in powder form, makes 50 ml of each)
3822-7004	159 001 581	pH 4.01 buffer solution, 1 pint (473 ml) bottle
3822-7007	159 001 582	pH 7.00 buffer solution, 1 pint (473 ml) bottle
3822-7010	159 001 583	pH 10.00 buffer solution, 1 pint (473 ml) bottle

^{**}The 2760 preamplifier is used for connection directly to Signet 8750 Transmitter or other analog transmitters.